

Manual of HP88 printhead resetter

Summarize

At present, the printing market is becoming more and more competition, the price of the original printing products is expensive, how to decrease and save the cost of printing is our concern. The printhead of Hp 88 is accurately reset by our printhead resetter. You can use the low cost to reset your printhead, it can help you acquire the advantage of the market.

Configuration

(1) This system is mainly made by power module and resetter.

(2) The Power module Specifications: AC/DC ADAPTOR

I/p/AC: 100-240VAC


50-60Hz

O/P DC: 9VDC 1A

(3) Before use the resetter, you should contact the power module to the Resetter (see picture 1)

Press "R" button, you can start resetting the printhead

Press "V" button, you can check that the printhead is resetting ok or not.

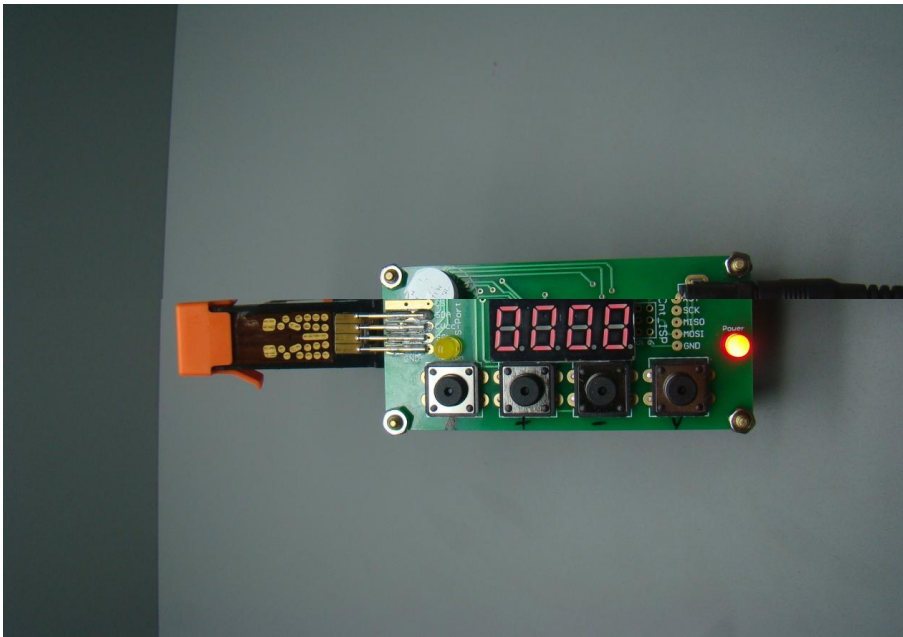

Suitable

The Resetter is suitable for Hp88 printhead; it can reset the hp88 printhead. (see picture 2)



Instruction

When you want to reset the Hp88 printhead,you should use our pritherhead Resetter as follow instructions:

1. Before you use our Resetter to reset the printerhead,please note:
 - (1)when you find the light of the “printhead healthy” program shows “yellow”,it means the printhead should be resetted by our resetter ;
 - (2)if the light shows “green”, it means the printerhead is ok,don’t need reset ;
 - (3)But if the light shows”red”,it means the printerhead has destroy, it can’t not be resetted. (see picture 03)




03

2. If the light shows “yellow”, then you should turn off the printer power, take the printhead out of the printer
- 3.Now you can Contact the four pins of the Resetter to the printerhead four pins (see picture 04)


4. Then press the “R” button , it can be resetted by our printhead Resetter.

Remark: when you listen”bi” ,it means ok ; but when you listen”bi,bi,bi..”, it means wrong, you can press the “R” button reset again. (See picture 04)

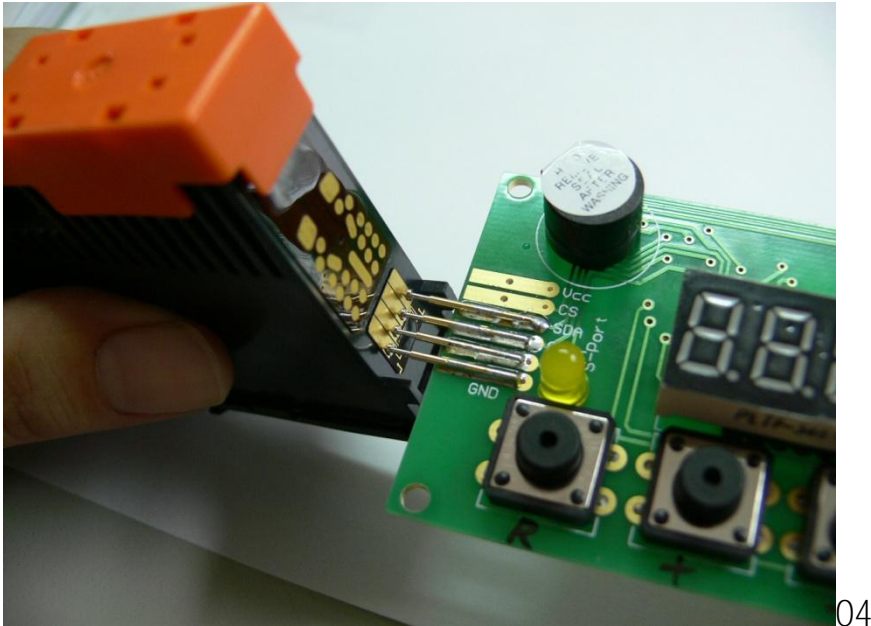

5...It is easy to check.

After you finish the resetting, you can press the “v”button to check the Resetter is resetting ok or not. (See picture 05)

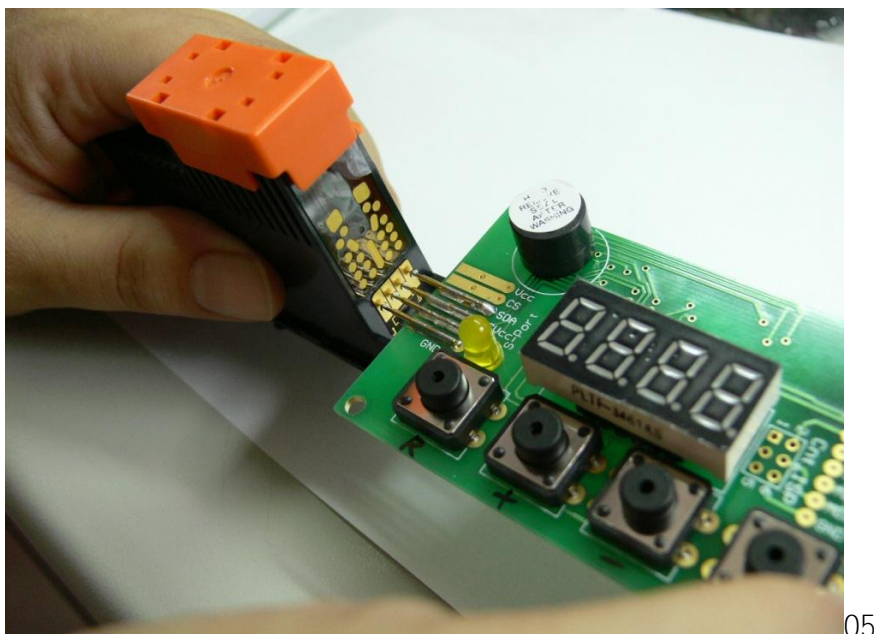

6. After finish resetting, put the printhead into the printer

7. Finally, you can find the "printhead healthy" program shows as follow picture(see 06), two printhead light shows "green". It means the printhead has been successful resetted by our Resetter.



06